

Use of M230X Ceiling Projector

1. **Necessary PC leads and remote control** are in a box in the rear seat cupboard (ask the Booking Secretary for its location).
2. Pull down the **projector screen**.
3. Start your **PC** (if not already done so).
4. Attach either **VGA or HDMI** (see Fig. 1) cable to PC and respective socket on wall plate.
5. Switch the projector on using the **wall switch**; a red neon light shows on the wall switch and an orange light appears under the projector.
6. Point the **remote control** at the screen and press **“Power On”** (Fig. 2); the light under the projector turns blue.
7. The projector is set up to start with a **VGA** cable attached so if you are using a **VGA** cable, you should soon see the picture from your PC screen. Be patient! This may take some time!
8. If you are using the **HDMI** cable you will see **“COMPUTER1. NO INPUT”** on the projector screen; point the **remote at the screen** and press button 6 (Fig. 2).
9. If you replace the **HDMI** cable at some stage with a **VGA** one and get the error message **“HDMI. NO INPUT”**, then press button 1 (Fig. 2).
10. If you wish to use the **sound system**, see **“Sound System”** below.
11. To **switch off** the projector:
 - a. Press the **“Power Off”** button on the remote control – the projector screen shows: **“POWER OFF. ARE YOU SURE”** (Fig.3).
 - b. Press the **ENTER** button (Fig. 4) or re-press of the **Power Off** (Fig.2). The projector lamp will turn off and the light under the projector will turn orange. (If **“Yes”** is not highlighted, use the left/right buttons on the remote to highlight it, then press **ENTER**. Fig. 4).
 - c. **Switch the projector off at the wall switch**, the red neon light will go off. There is no need to wait for any **“lamp cooling period”**.
 - d. **Switch off the sound system at the wall switch at the back of the Hall**, if used.

SOUND SYSTEM

If you wish to use the **sound system** for your presentation: The controls above the rear seat cupboard control the system. **To switch on:** the **switch** above the seat controls the **power** to the equipment and the nearby **knob** controls the **volume** (Fig. 5). It is therefore a simple matter of putting the switch to the on position and adjusting the volume as necessary.

If using a **VGA** cable, connect an **audio lead** with a 3.5 mm jack plug at one end (PC) and a 6.35 mm jack plug at the other (wall audio socket). A suitable lead is available in the accessories box; If using an **HDMI** cable there is no need to connect the PC to the audio socket. **But you do need to switch on the sound system!**

Volume control: The loudspeaker volume can be adjusted using the PC volume control and/or the sound system volume control.

Please remember to switch off after use.

VGA Cable



Fig. 1

HDMI Cable



Fig. 2



Fig. 3



Fig. 4

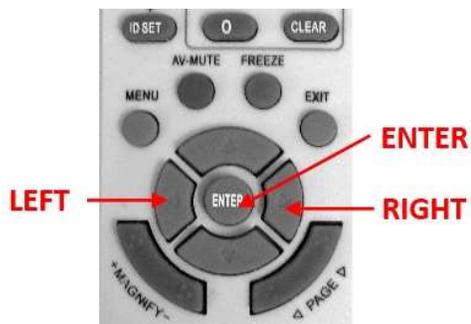


Fig. 5

